

COMPONENT CONDITION



Front Axle ST1030
 Model 101.1642.3H
 Part Number 5580 1016 92
 Serial 566596

Plate



ITEM	DESCRIPTION	NUMBER PART	STATUS
1	Axle Housing	5580 0180 92	Reused
2	Breather	5590 0012 35	New
3	Screw Plug	0686 4255 00	New
4	Sealing Ring	0653 1227 00	New
5	Screw Plug	5580 0134 74	New
6	Sealing Ring	0653 0500 68	New
40	Axle Shaft	5580 1020 42	Reused
41	Arbre De Roue	5580 1020 43	Reused
42	Wheel Hub	5580 0180 95	Reused
43	Wheel Stud	5580 0180 96	New
50	Radial Seal Ring	5590 0011 77	New
53	Tapered Roller Bearing	5580 0180 97	New
54	Tapered Roller Bearing	5590 0012 09	New
55	Ring	5590 0012 10	New
59	Nut	5590 0012 11	Reused
60	Hexagon Socket Screw	0211 1965 31	New
250	Inner Disk	5590 0011 80	New
251	Outer Disk	5580 0180 98	New
252	Piston	5590 0012 43	Reused
258	Gasket	5590 0011 81	New
259	Gasket	5590 0011 82	New
260	Brake Carrier	5590 0012 44	Reused
261	Housing	5580 0180 99	Reused
262	O-Ring	5590 0011 83	New
263	O-Ring	5590 0011 84	New
265	O-Ring	5590 0093 51	New
266	Hexagon Socket Screw	0211 1964 27	New
269	Hexagon Socket Screw	0211 1102 60	New

271	Face Seal	5590 0011 89	New
274	Screw Plug	0686 6444 04	New
275	Sealing Ring	0653 1101 00	New
278	Bleeding Socket	5590 0011 92	New
279	Sealing Ring	0653 1070 00	New
280	Bleeder Valve	5590 0011 94	New
284	Compression Spring	5590 0011 95	New
285	Compression Spring	5590 0011 96	New
296	Intermediate Piece	5590 0012 46	Reused
297	Piston Guide Ring	5590 0011 97	New
300	Planetary Housing	5580 0181 00	Reused
301	Planetary Carrier	5580 0181 01	Reused
304	O-Ring	5590 0011 98	New
305	Screw Plug	0686 6448 04	New
306	Sealing Ring	0653 0500 68	New
307	Screw Plug	0686 4230 19	New
308	Sealing Ring	0653 1101 00	New
309	Thrust Ring	5590 0012 20	New
312	Hexagon Socket Screw	0215 0003 14	New
314	Sun Gear	5580 0181 02	Reused
315	Sun Gear	5580 0181 03	Reused
316	Circlip	0335 1178 00	New
317	Circlip	0335 1104 30	New
320	Thrust Ring	5590 0012 19	New
321	Thrust Ring	5590 0012 20	New
322	Planetary Gear	5580 0181 04	Reused
323	Planetary Gear	5580 0181 05	Reused
324	Thrust Washer	5590 0012 23	New
326	Thrust Washer	5590 0012 24	New
328	Ring	5580 0264 97	New
329	Needle Bearing	5590 0012 25	New
330	Needle Bearing	5580 0181 06	New
331	Planetary Pin	5580 0181 07	New
332	Planetary Pin	5580 0181 08	New
333	Locking Pin	0108 1103 10	New
334	Locking Pin	0108 1327 00	New
335	Ring Gear	5580 0181 09	Reused
336	Ring Gear Carrier	5590 0012 52	Reused
337	Retainer	5590 0012 53	Reused
338	Hexagon Screw	0147 1964 75	New
340	O-Ring	0663 2106 52	New
401	Drive Pinion	5580 0181 11	Reused
402	Ring Gear	5590 0016 42	Reused
403	Differential Housing	5580 0181 12	Reused
404	Differential Housing	5580 0181 13	Reused
405	Differential Spider	5590 0012 57	New
406	Differential Side Gear	5580 0181 14	New
408	Differential Pinion	5590 0012 59	New
412	Bushing	5590 0011 53	New

413	Hexagon Socket Screw	0211 1965 30	New
414	Hexagon Screw	0147 1964 74	New
415	Tapered Roller Bearing	5590 0011 56	New
416	Tapered Roller Bearing	5590 0011 57	New
417	Differential Carrier	5590 0012 60	Reused
418	Hexagon Screw	0147 1964 72	New
419	Setting Ring	5590 0012 61	Reused
420	Setting Ring	5590 0012 61	Reused
421	Lock Plate	5590 0011 59	Reused
422	Hexagon Screw	0147 1964 75	New
423	Hexagon Screw	0147 1107 24	Reused
427	Screw Plug	0686 4255 00	New
428	Sealing Ring	0653 1227 00	New
432	Tapered Roller Bearing	5580 0181 15	New
433	Thrust Washer	0324 1551 87	New
434	Thrust Washer	0324 1551 85	New
435	Bushing	5590 0011 68	New
436	Tapered Roller Bearing	5580 0181 16	New
439	Cover	5590 0012 62	Reused
440	Radial Seal Ring	0666 6000 68	New
442	Hexagon Socket Screw	0211 1957 56	New
444	Drive Flange	5580 0181 17	Reused
445	Adjusting Nut	5590 0011 73	New
545	Set of plates	5580 0181 18	New
572	O-Ring	0663 2113 38	New
2642	Ring	5580 0181 23	New
2804	Thread Bushing	5590 0012 66	New
2805	O-Ring	5590 0093 51	New
2808	O-Ring	5590 0012 06	New
2809	Cap Nut	0277 1130 04	New